



## USER MANUAL

### USER MANUAL


#### THE USE OF THE POCKET

The pocket magnetically attaches to Magsafe compatible cases and phones.

The pocket will hold 1 card which can be slid in from the top of the pocket.

After being used for a while, the pocket might stretch and could hold up to 2 cards.

Remove the cards out of the pocket before placing it on a wireless charger or Magsafe charger.

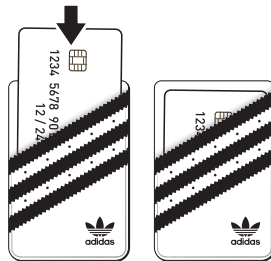

#### REMOVE OF THE POCKET

To remove the pocket from any surface carefully put your finger under the back of the pocket of the pocket and carefully lift it from the attached surface.



#### THIS PRODUCT IS NOT RESPONSIBLE FOR:

- \*Any damage to any surface caused by the use or application of the pocket.
- \*Any discoloration resulting from the application or removal of the pocket.
- \* Any damage to any device and device protection resulting from the incorrect use of the pocket.
- \* Any damage or malfunction to cards that were put inside the pocket.
- \* Any loss of cards or pocket from incorrect use of the pocket.